PARTS LIST

for

Whirlpool CORPORATION

30″ ELECTRIC FREESTANDING CONTINUOUS CLEAN RANGE

MODEL RF330PXPW0

▲W—White, F—Toast,
G—Harvest Gold,
M—Platinum, N—Almond

FSP

FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS

FSP

Whirlpool CORPORATION
Benton Harbor, Michigan.

FOR SERVICE INFORMATION
SEE SERVICE (BROWN) FILMCARD(S)
115-A-1
125-G-1

6-85 Litho in U.S.A.

Part No. 884123 Rev. A

COOKTOP PARTS

For Model: RF330PXPW0

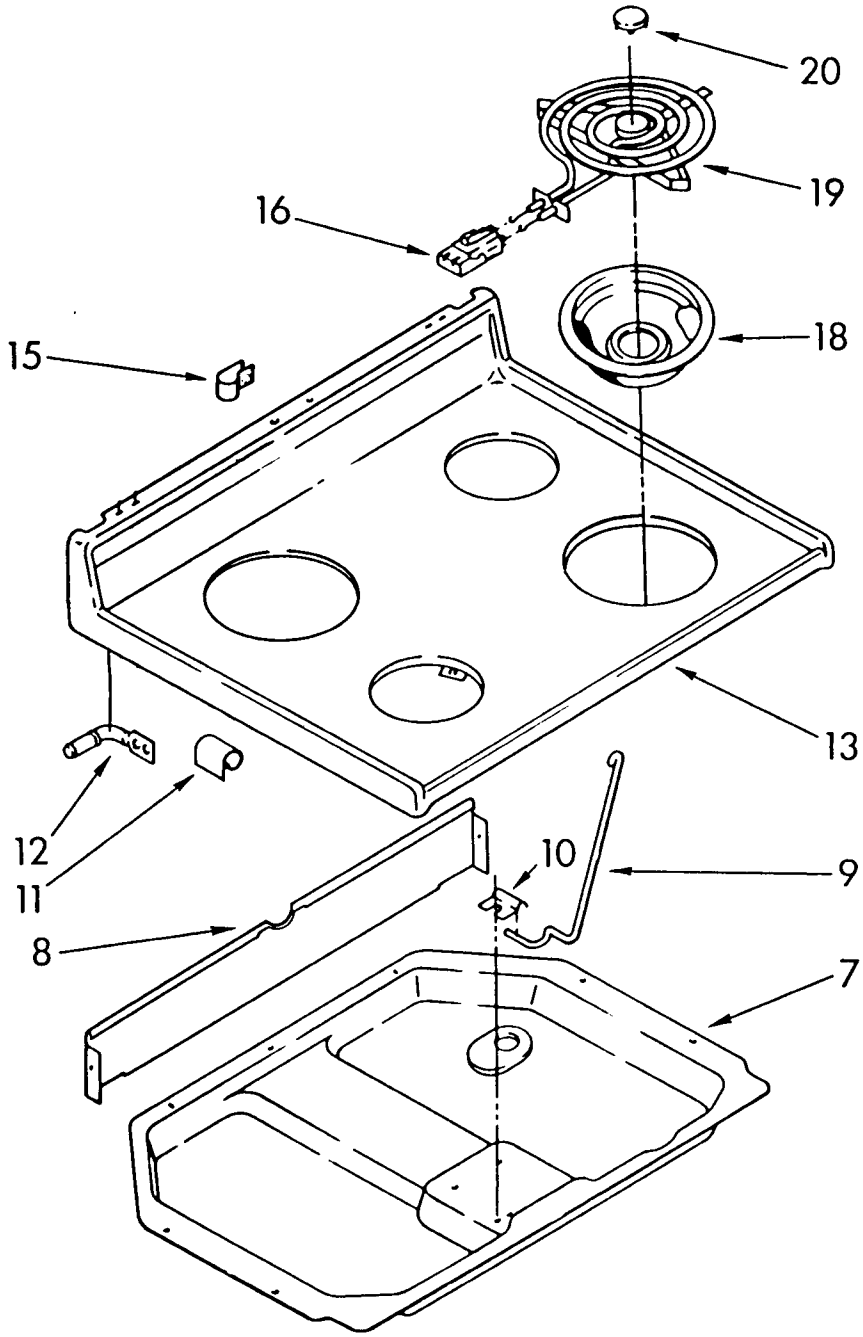

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

7	307929	Burner Box
	309112	Screw, 10A x 3/8 (4)
8	307973	Shield, Wiring
	343641	Screw, 10-16 x 1/2 (4)
9	307968	Rod, Cooktop
10	307967	Retainer, Cooktop
	309112	Screw, 10A x 3/8
11	307965	Bracket, Cooktop (2)
	343641	Screw, 10-16 x 1/2 (4)
12	307966	Pin, Cooktop (2)
	343641	Screw, 10-16 x 1/2 (4)
13		Cooktop
	307866	White
	307863	Harvest Gold
	307871	Almond
	313165	Toast
	313166	Platinum
	690989	Screw, 10-32 x 1/2
15	308605	Strain Relief
	343641	Screw, 10-16 x 1/2
16	258858	Receptacle Clip (4)
	311932	Screw, 6-32 x 1/4 (4)
18	308539	Reflector Pan 6" (2)
	308540	Reflector Pan 8" (2)
19	660528	Unit, Surface 6" L.F. & R.R.
		309191 (Alt.)
		309249 (Alt.)
	660530	Unit, Surface 8" R.F. & L.R.
		309185 (Alt.)
		309216 (Alt.) (Includes Illus. 20)
20	309195	Medallion (4)

CONTROL PANEL PARTS

For Model: RF330PXPW0

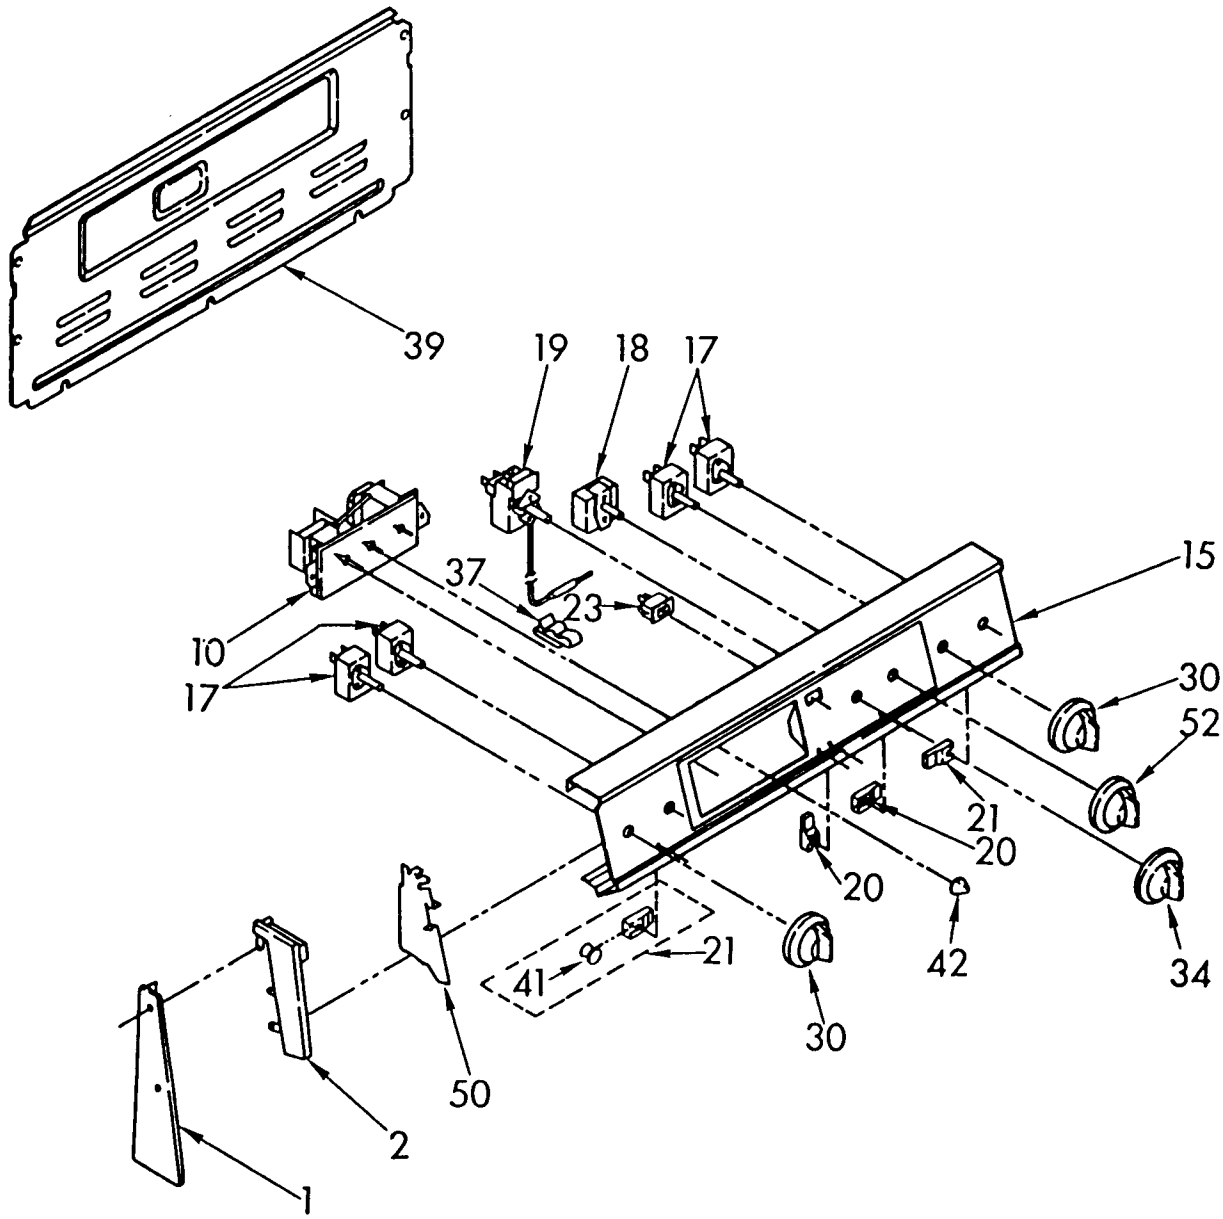

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	313191	End Trim R.H.
	313190	End Trim L.H.
	309112	Screw, 10A x 3/8 (2)
	343641	Screw, 10-16 x 1/2 (4)
2	313230	End Cap R.H.
	313231	End Cap L.H.
	254225	Screw, 8BT x 1/4 (4)
10	313063	Timer,
15	313236	Panel, Control
	312604	Screw, 8-18 x 5/8 (4)
	690989	Screw, 10-32 x 1/2
17		Switch, Infinite
	311858	Use W/8" Surface Unit (2)
	311856	Use W/6" Surface Unit (2)
	311865	Screw, 8-32 x 1/4 (8)
18	313061	Switch, Selector (3 Position)
	311865	Screw, 8-32 x 1/4 (2)
19	661150	Thermostat, Oven Pyro
		310864 (Alt.)
		311498 (Alt.)
	311932	Screw, 6-32 x 1/4 (2)
20	313111	Light, Indicator (1) (Oven) (Includes Illus. 41)
21	313102	Light, Indicator (Surface Unit) (2) (Includes Illus. 41)
23	313357	Switch, Oven Light
30	330177	Knob, Control (4)
34	330176	Knob, Control (4)
	310410	Screw (2)
37	313570	Tube Clip
39	313195	Rear Cover Control Panel
	343641	Screw, 10-16 x 1/2 (8)
41	313101	Lens, Amber (3)
42	330206	Knob, Timer (1)
50	313608	Shield, Glass (2)
	246132	Screw, 8A x 3/8 (2)
52	330180	Knob, Control
	688805	Spring

DOOR AND DRAWER PARTS

For Model: RF330PXPW0

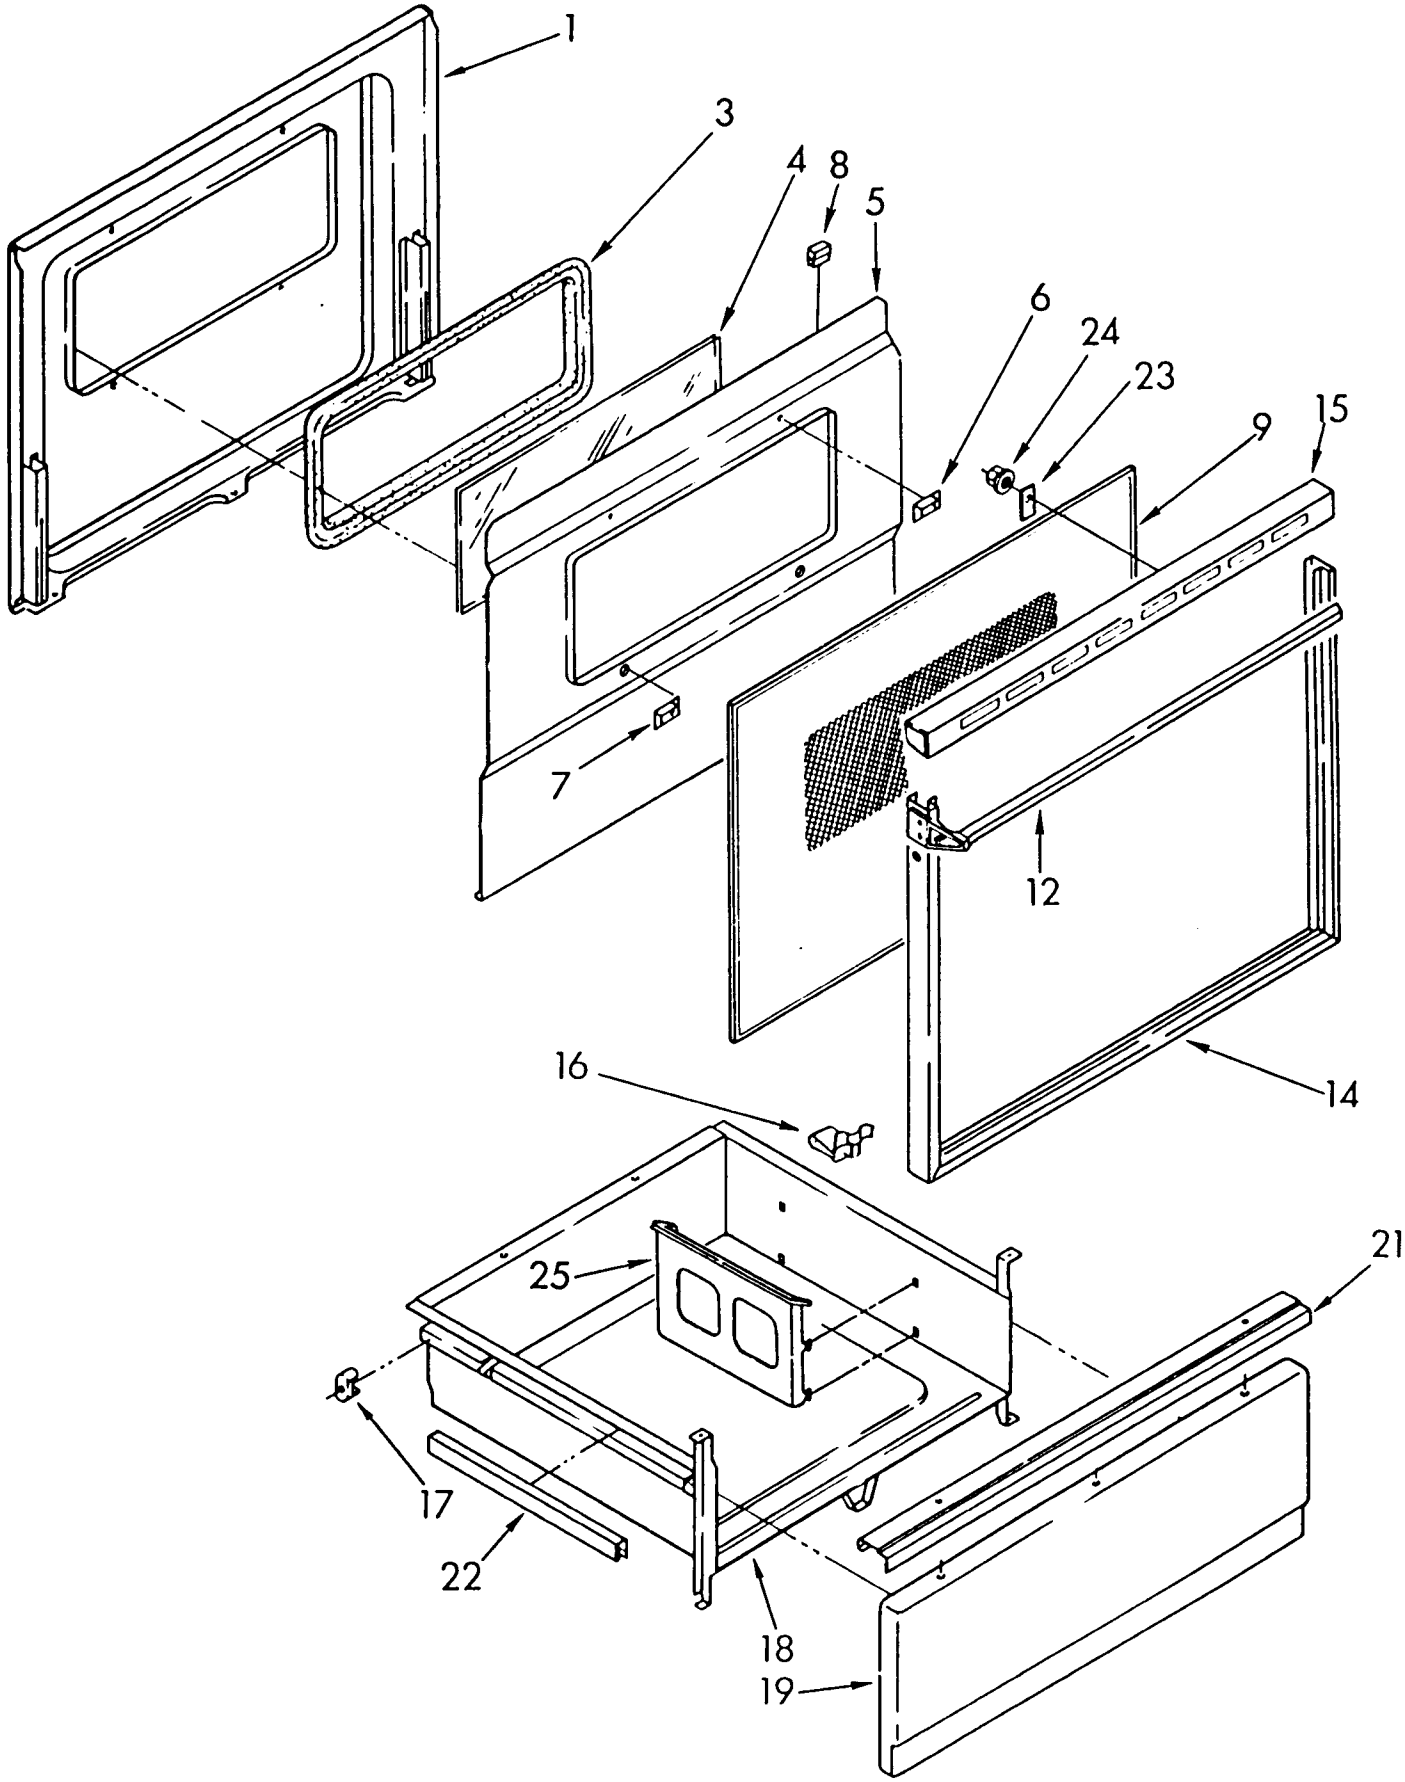

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	329685	Liner, Door
	307748	Screw, 10A x 1/2 (5)
	311056	Screw 10A x 1/2 (4)
3	258711	Seal, Glass
4	258988	Glass, Inner
5	307924	Baffle, Insulation
6	258990	Spacer, Baffle (2)
	307748	Screw, 10A x 1/2 (2)
7	258990	Spacer, Baffle (2)
	307748	Screw, 10A x 1/2 Black (20
8	312783	Bumper, Rubber (4)
9	309069	Glass, Outer
12	312722	Handle, Oven Door
	355515	Screw, 8A x 7/8 (4)
14	310427	Frame, Door
15	310428	Top, Door Frame
	311506	Clip (2)
16	310706	Clip, Glass (10)
17	307980	Glide, Rear (2)
	307748	Screw, 10A x 1/2 (2)
18	327887	Drawer, Utility
19		Panel Drawer
	307935	White
	307938	Harvest Gold
	307939	Almond
	313171	Toast
	313172	Platinum
	312566	Screw, 8-18 x 1/2 (3)
21	313337	Handle, Drawer
	313349	Screw 8-18 x 1/2 (2)
22	309329	Protector, Drawer (2)
23	310705	Clip (2)
24	90296	Fastener, Pushnut (2)
25	357645	Literature Rack

OVEN PARTS

For Model: RF330PXPW0

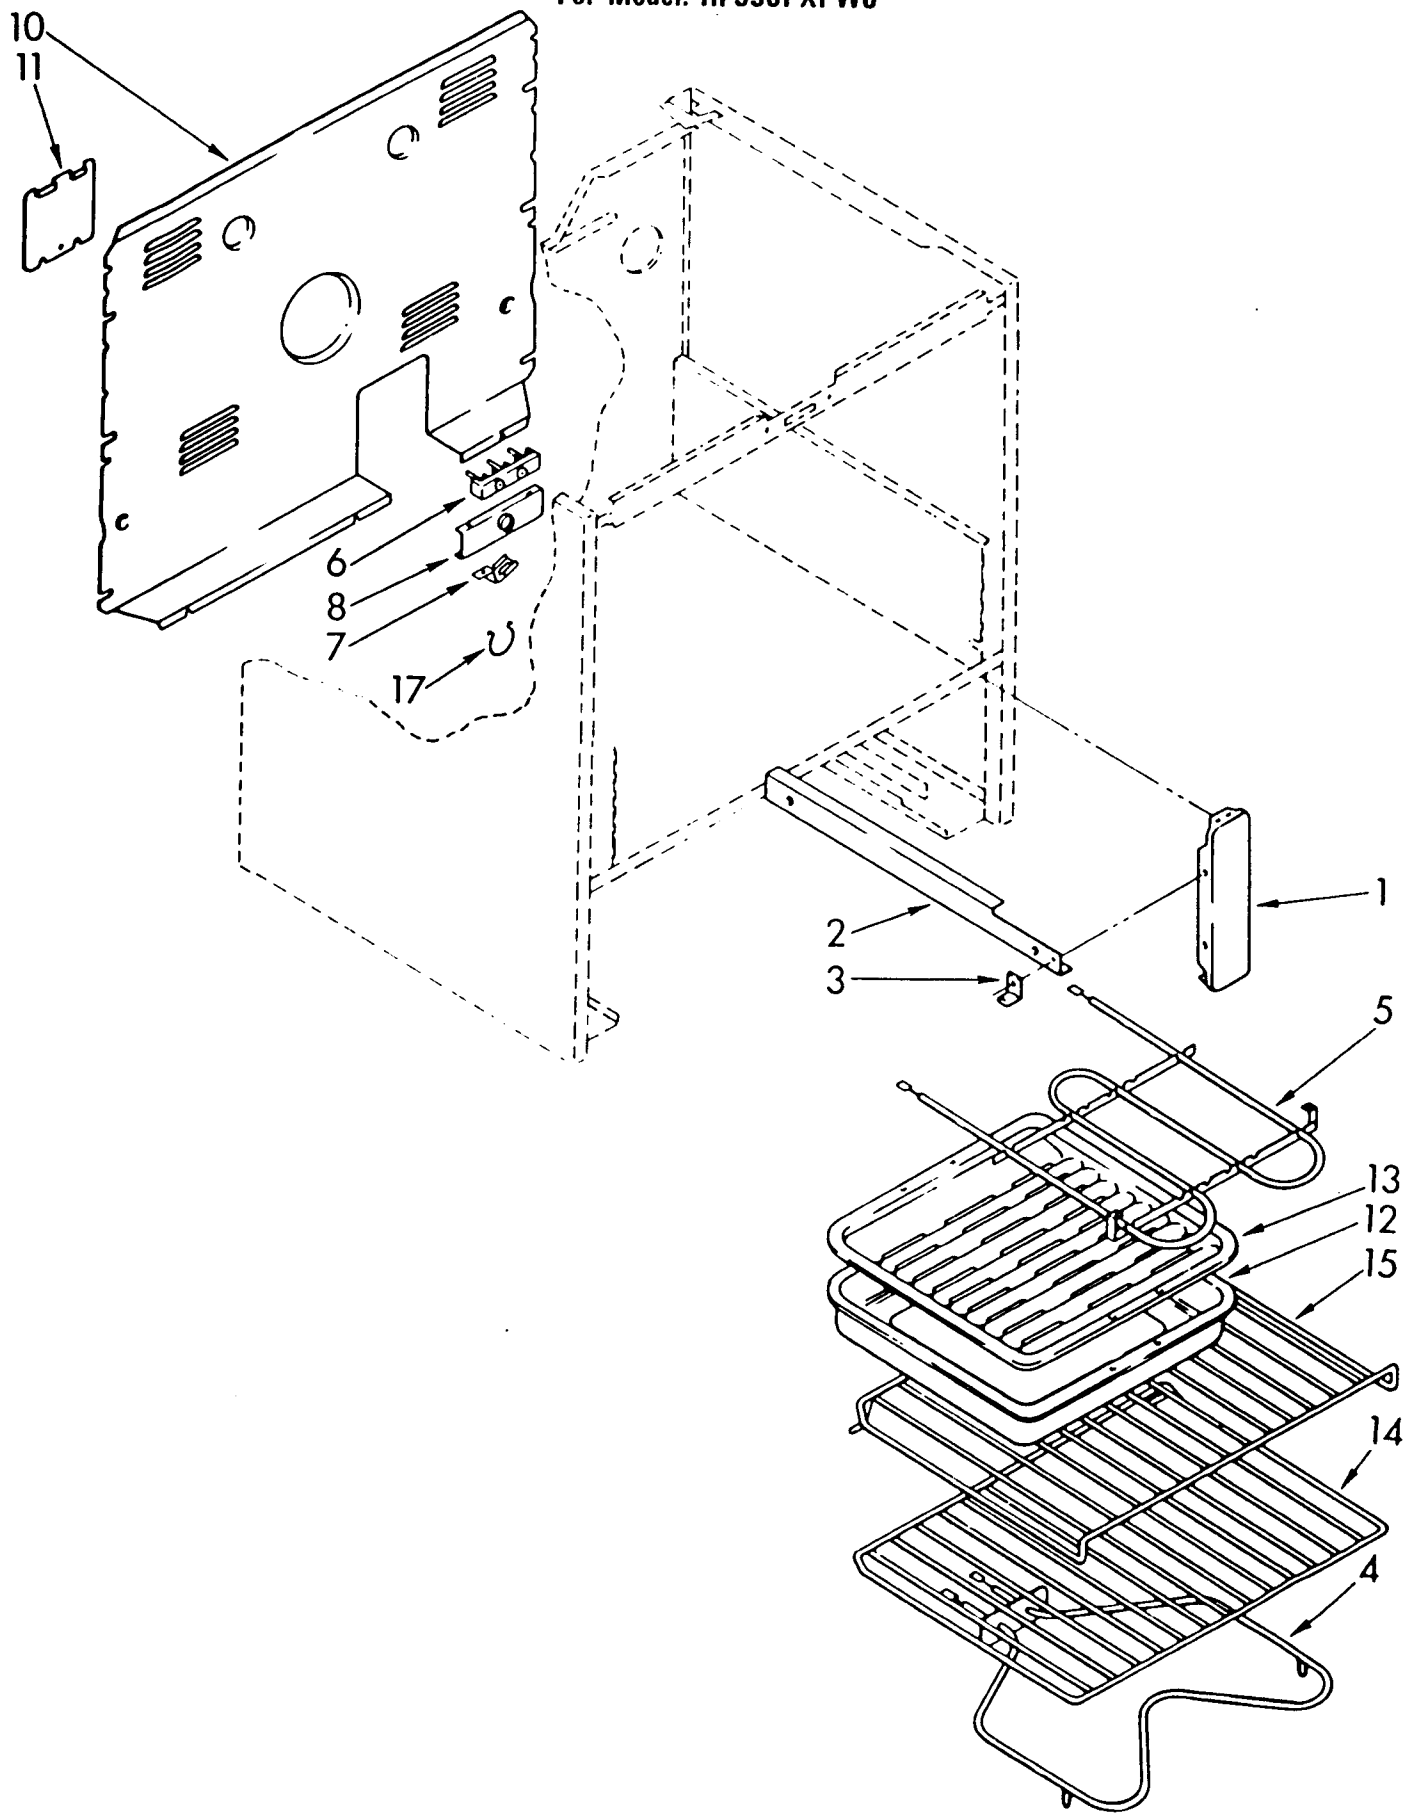

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	307981	Bracket, Mounting (2)
2	307982	Rail R.H. (Includes Illus. 3)
	307983	Rail L.H. (Includes Illus. 3)
	307748	Screw, 10A x 1/2 (2)
3	307979	Glide, Front (2)
4	308180	Unit, Bake (240V)
	312309	Unit, Bake (208V)
	246127	Screw, 10-32 x 5/8 (2)
5	660579	Unit, Broil
		311714 (Alt.)
		311713 (Alt.)
	312308	Unit, Broil (208V)
	246127	Screw, 10-32 x 5/8 (2)
6	258076	Terminal Block
	98884	Screw, 10-16 x 1 (2)
	112432	Nut (6)
7	308498	Ground Strap
	313660	Clip
	690989	Screw, 10-32 x 1/2
8	307970	Bracket, Service
	343641	Screw, 10-16 x 1/2 (2)
10	307971	Cover, Rear
	343641	Screw, 10-16 x 1/2 (7)
11	307972	Cover, Service
	343641	Screw, 10-16 x 1/2 (2)
12	310976	Pan, Broiler
13	258171	Rack, Broiler
14	308173	Rack, Oven (Straight)
15	308172	Rack, Oven (Offset)
17	313438	Clip, Harness

LITERATURE AND OPTIONAL PARTS
OPTIONAL PARTS NOT INCLUDED

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~c
242820	Wire, Black 14 Ga. 150~c
242821	Wire, Blue 14 Ga. 150~c
242822	Wire, Brown 14 Ga. 150~c
242830	Wire, Brown 14 Ga. 200~c
242823	Wire, Green 14 Ga. 150~c
242824	Wire, Orange 14 Ga. 150~c
242829	Wire, Red 12 Ga. 150~c
242825	Wire, Red 14 Ga. 150~c
242831	Wire, Red 14 Ga. 200~c
242826	Wire, White 14 Ga. 150~c
242827	Wire, Yellow 14 Ga. 150~c
242832	Wire, Yellow 14 Ga. 200~c

PAINT TOUCH-UP(1/2 OZ.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
72112	Toast
72113	Platinum
**511873	White Porcelain (2 Oz.)

PAINT, PRESSURED SPRAY (13OZ.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285365	Toast
285366	Platinum
285006	Superior Black
206922	Primer (White)
206925	Leveler (Thinner) (2 Oz.)

PAINT,BULK (1 QT.)

799344	White (Uncut)
978883	Almond (Uncut)
261889	New Avocado (Uncut)
261887	Coffee (Uncut)
261891	Harvest Gold (Uncut)
285367	Toast (Uncut)
285368	Platinum (Uncut)

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
261748	Touch-Up Continuous Clean (1 oz.)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
241430	Foil, Aluminum Oven (18" x 25!)

ACCESSORY PARTS

242985	Rotissorie Kit (RCK 81)

LITERATURE PARTS

LIT313473	Installation Instructions
LIT313286	Guide, Use & Care
LIT313358	Book, Cooking Guide
LIT884123	List, Parts

**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

OVEN PARTS

For Model: RF330PXPW0

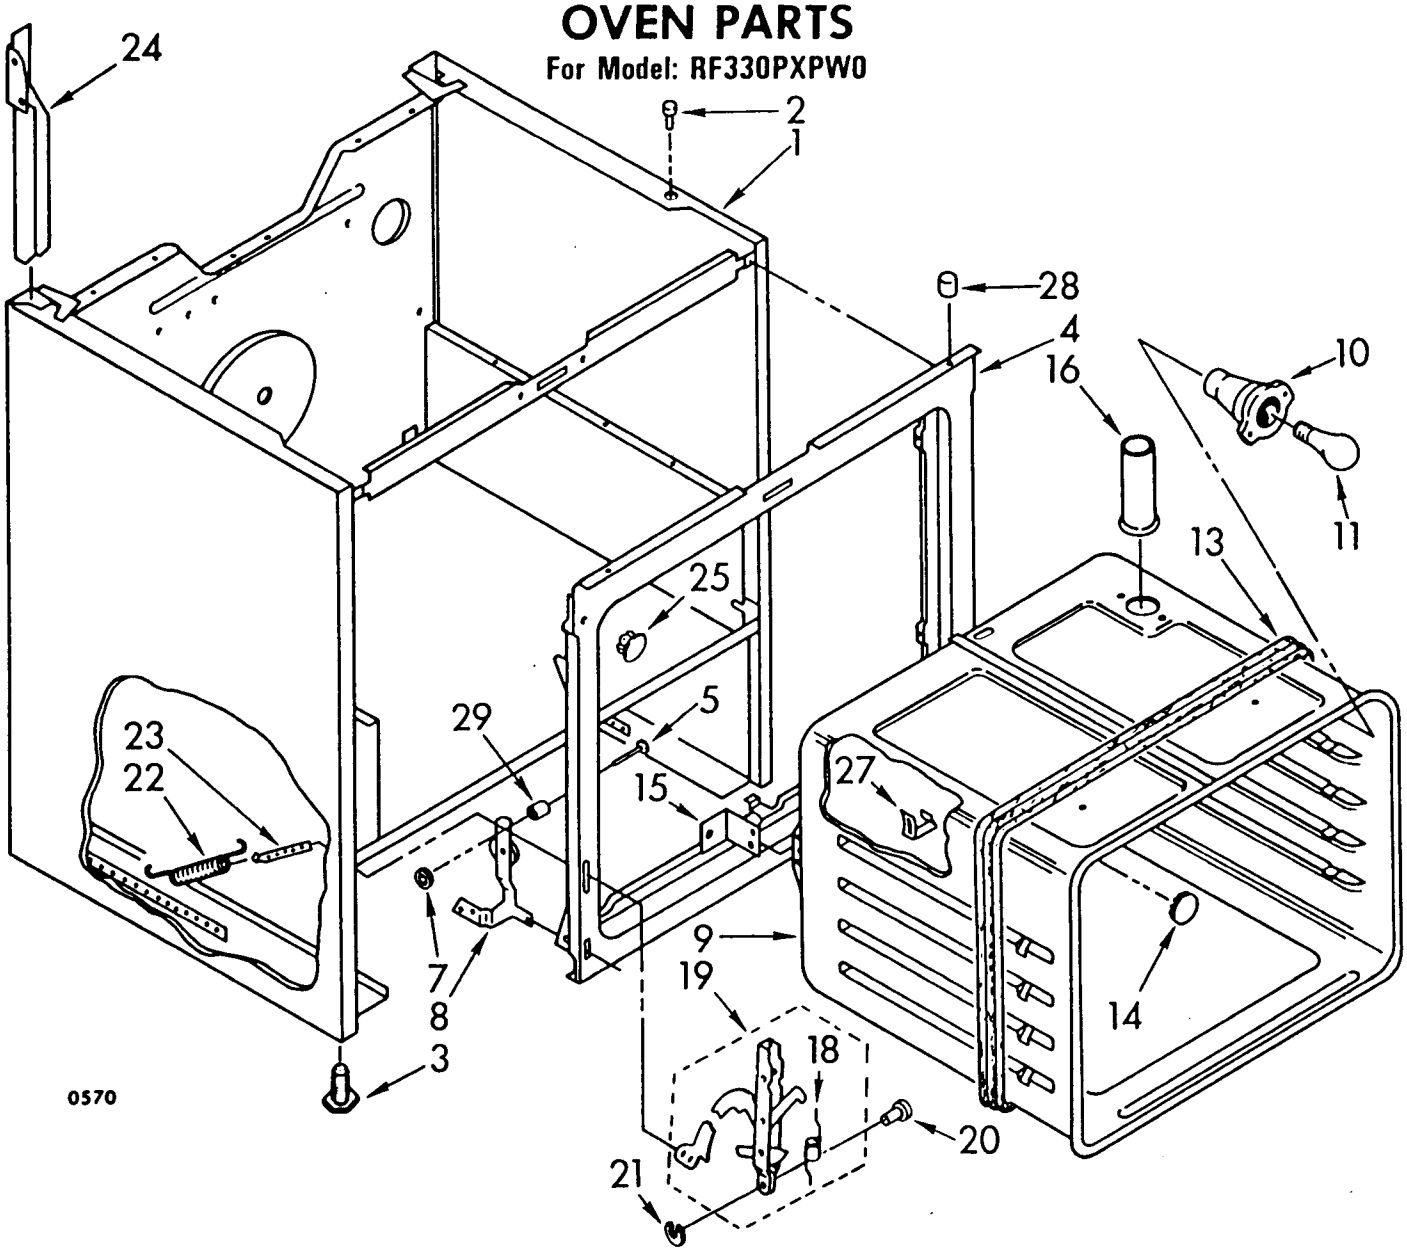

1		Main Chassis
	330086	White
	330089	Harvest Gold
	330090	Almond
	330091	Toast
	330092	Platinum
	690989	Screw, 10-32 x 1/2
	343641	Screw, 10-16 x 1/2 (2)
2	238614	Bumper, Cooktop (2)
3	312701	Leg Leveling (4)
4	330166	Frame, Front
	343641	Screw, 10-16 x 1/2 (13)
5	307985	Pin, Hinge
7	308306	Pushnut
8	327890	Hinge, R.H.
	327891	Hinge, L.H.
	343641	Screw, 10-16 x 1/2 (4)
9	329001	Oven (30" Pyro)
	311056	Screw (3)
10	660556	Socket, Lamp
		307856 (Alt.)
		310208 (Alt.)
	308043	Screw, 10-12 x 7/8 (2)
11	311255	Bulb, Oven Light
13	309107	Seal, Heat
14	257314	Plug, Button
15	311220	Bracket, Oven Mounting
	343641	Screw, 10-16 x 1/2 (4)
16	307960	Vent, Oven
	307748	Screw, 10A x 1/2 (2)
18	308207	Spring, Door Stop
19	329712	Channel, Arm (2)
20	307986	Hinge Pin (2)
21	307594	Ring, Retainer (2)
22	308127	Spring, Oven Door (2)
23	308125	Anchor, Spring (2)
24	313196	Support, L.H. Channel
	313197	Support, R.H. Channel
	343641	Screw, 10-16 x 1/2 (4)
25	308535	Button, Plug
27	313382	Clip, Therm Bulb (2)
28	311909	Locator, Cooktop (2)
	310210	Screw, 8-32 x 5/16 (2)
29	309111	Snubber, Door (2)

WIRING HARNESS PARTS

For Model: RF330PXPW0

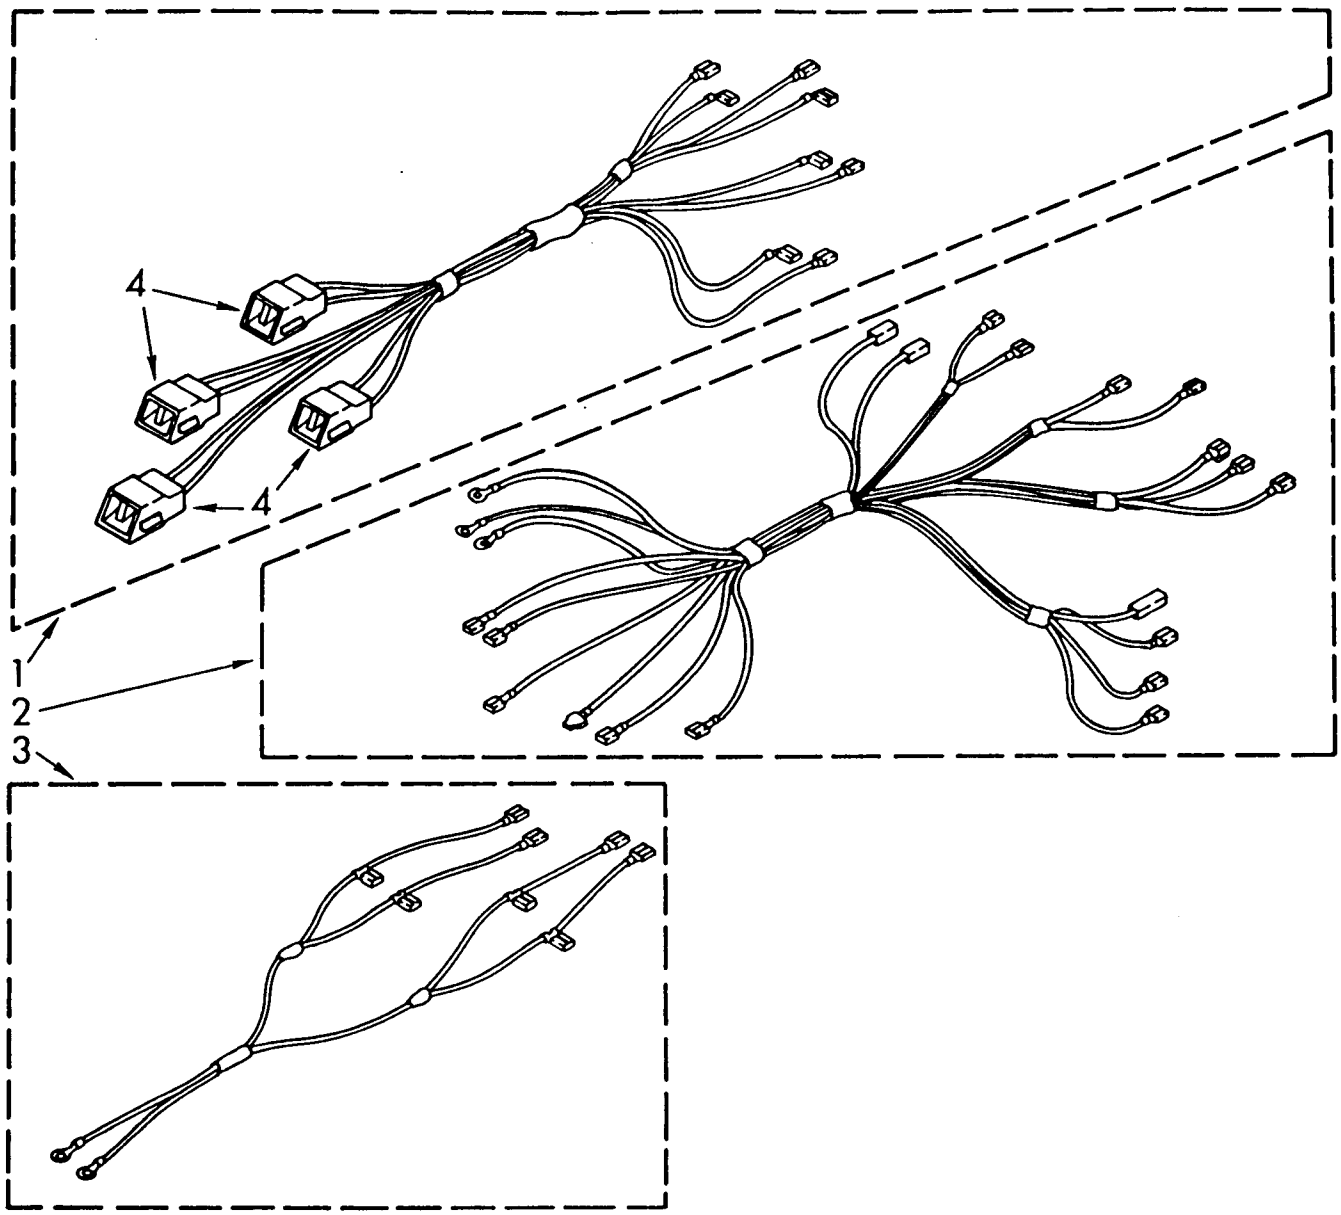

FOR C

CE LIST

884123

125-9-14

1	313148	Harness, Wire (Suface Units)
2	313150	Harness, Wire (Oven)
3	313147	Harness, Wire (Supply)
4	330031	Receptacle